
EINBAUANLEITUNG

INSTALLATION GUIDE

RunBlock – Universal

Art. Nr. B-3670010

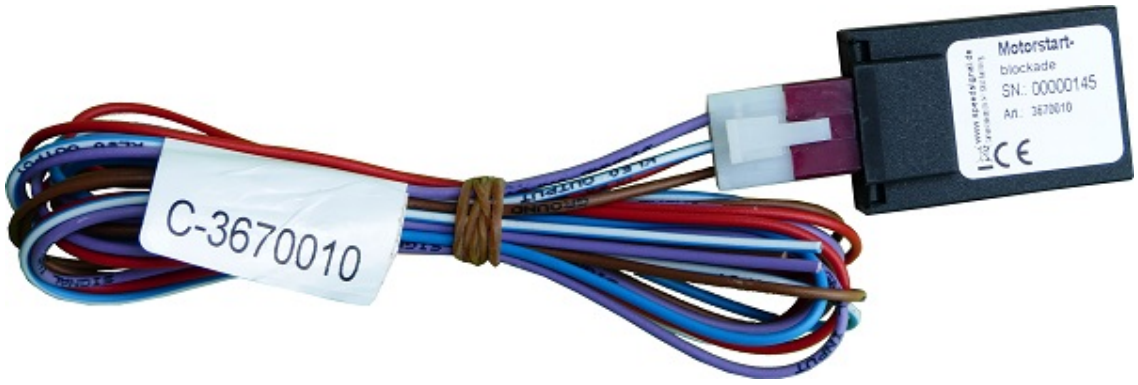

CE

speedsignal GmbH
Carl-von-Ossietzky-Straße 3 + 7
D- 83043 Bad Aibling

Phone: **+49 8061 49518 – 0**
Fax: +49 8061 49518 – 10

E-Mail: **info@speedsignal.de**
Homepage: www.speedsignal.de
facebook: facebook.com/speedsignal

Lieferumfang – Scope of delivery



Interface RunBlock
Interface RunBlock
3670010



Kabelsatz
Cable harness
C-3670010


Beschreibung – Description

Universale Motorstartblockade, welche den Motorstart verhindert, sobald ein Steuersignal anliegt.
Anwendungsbeispiel: externe 230V Einspeisung

Universal engine start blockade which prevents the engine from starting as soon as a control signal is applied.
Application example: external 230V power supply

Pin Belegung Interface – Pin assignment interface

Anschlussbelegung 6-poliger Minifit-Stecker
Pin assignment 6-pin Minifit connector

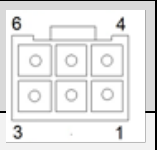

PIN	Ein-/Ausgang Input/Output	Bezeichnung Designation	Kabelfarbe Cable colour	Bemerkung Remark
1	Eingang Input	Masse Ground	braun brown	
2	Eingang Input	Klemme 50 IN Calmp 50 IN	rot red	
3	nicht belegt not assigned	---	---	---
4	nicht belegt not assigned	---	---	---
5	Ausgang Output	Klemme 50 OUT Clamp 50 OUT	blau-weiß blue-white	
6	Eingang Input	Masse Signal (Ansteuerung) Ground signal (control)	gelb yellow	

Rechtlicher Hinweis – Legal notice

Wir weisen darauf hin, dass eine Verwendung des gelieferten Produktes im Straßenverkehr in allen Vertragsstaaten des Wiener Übereinkommens über den Straßenverkehr unzulässig ist.

Ein Verbau in Fahrzeugen die am öffentlichen Straßenverkehr teilnehmen sollte in jedem Fall mit der zuständigen Genehmigungsbehörde im Vorfeld abgeklärt werden.

Das Produkt wurde von uns nach bestem Wissen und Gewissen geprüft, für Schäden die aus einer Verwendung des Produkts in Fahrzeugen die am öffentlichen Straßenverkehr teilnehmen können wir jedoch keine Haftung übernehmen.

Des Weiteren ist unbedingt darauf zu achten, dass die Ansteuerungseinheit eine Außerbetriebsetzung des Fahrzeugs nur auf expliziten Steuerungsbefehl am bereits seit längerem abgestellten Fahrzeug vornehmen kann.

Es muss auf jeden Fall Sorge getragen werden, dass auch bei kurzfristig inaktivem Motor eine Wiederinbetriebsetzung ermöglicht wird um das Fahrzeug aus Gefahrenbereichen zu entfernen.

Eine Verwendung des Produktes wird ausdrücklich nur für Fahrzeuge empfohlen, die für einen Kurzstreckenverkehr auf abgesperrtem Werksgelände verwendet werden.

We would like to point out that the use of the delivered product in road traffic is not permitted in all contracting states of the Vienna Convention on Road Traffic.

In any case, the installation in vehicles participating in public road traffic should be clarified in advance with the responsible approval authority.

The product has been tested by us to the best of our knowledge and belief, but we cannot accept any liability for damage resulting from the use of the product in vehicles participating in public road traffic.

Furthermore, it is essential to ensure that the control unit can only shut down the vehicle if an explicit control command has been issued on the vehicle, which has been parked for a long time.

In any case, it must be ensured that the vehicle can be restarted even if the engine is inactive for a short time in order to remove the vehicle from danger areas.

The use of the product is expressly recommended only for vehicles that are used for short-distance traffic on closed-off factory premises.

Garantiebestimmungen – Warranty Conditions

Die speedsignal GmbH gewährleistet innerhalb der gesetzlichen Frist von 2 Jahren ab Datum des Erstkaufes, dass dieses Produkt frei von Materialfehlern und Verarbeitungsfehlern ist, sofern dieses Produkt unseren Vorgaben entsprechend verbaut wurde.
Sollten Reparaturen durch Verarbeitungsfehler oder Fehlfunktionen des Produktes innerhalb der Gewährleistungsfrist nötig sein, wird die speedsignal GmbH das Produkt reparieren oder durch ein fehlerfreies Produkt ersetzen. Um die Gewährleistung beanspruchen zu können, benötigen Sie einen Kaufbeleg.
Der Garantieanspruch erlischt durch:

- unbefugte Änderungen am Gerät oder Zubehör
- selbst ausgeführte Reparaturen am Gerät
- unsachgemäße Nutzung bzw. Betrieb
- Gewalteinwirkung auf das Gerät (Herabfallen, mutwillige Zerstörung, Unfall, etc.)

Beachten Sie beim Einbau alle sicherheitsrelevanten und gesetzmäßigen Bestimmungen.

Bitte beachten Sie generell beim Einbau von elektronischen Baugruppen in Fahrzeugen die Einbaurichtlinien und Garantiebestimmungen des Fahrzeugherstellers.

Sie müssen auf jeden Fall den Auftraggeber (Fahrzeughalter) auf den Einbau eines Interfaces aufmerksam machen und über die Risiken aufklären.

Es empfiehlt sich, mit dem Fahrzeughersteller oder einer seiner Vertragswerkstätten Kontakt aufzunehmen, um Risiken auszuschließen.

speedsignal GmbH guarantees within the legal deadline of 2 years from the original date of purchase that this product is free from defects in material and workmanship as long as this product was installed similar to our installation guide.

If repairs of processing errors or malfunctions of this product are necessary within the warranty period, speedsignal will repair the product or replace it with a flawless product. To be able to assert the benefit of these provisions, you need the proof of purchase.

Warranty claim and operating license lapses:

- unauthorised changes on the device or accessory
- self-initiated repairs at the device
- improper use or operation
- violent impacts to the device (fall down, wanton destruction, accident, etc.)

For installation, please notice all safety and legal regulations.

When installing electronic assemblies into vehicles please note the installation guidelines and warranty conditions of the vehicle manufacturer.

In any case, you have to inform the principal (vehicle owner) about the installation of this interface and about all risks.

It is therefore recommended to get in contact with the vehicle manufacturer or with an authorized workshop to exclude any risks.

Sicherheitshinweise – Safety Instructions

Der Einbau dieses Artikels darf nur von geschultem Fachpersonal vorgenommen werden und nur nach der in dieser Anleitung beschriebenen Vorgehensweise.
Die speedsignal GmbH übernimmt keinerlei Haftung für Personen- oder Sachschäden, die mit dem Missbrauch unserer Produkte im Zusammenhang stehen.

Vor der Montage bitte die Batterie abklemmen. Beim Einbau müssen alle zusätzlichen Versorgungsleitungen entsprechend ihres Querschnittes und ihrer Kabellänge abgesichert werden. (DIN VDE 0298-4)

The installation of this product should only be carried out by trained specialist personnel and in accordance with this manual.

speedsignal GmbH cannot accept any liability for injury to persons or damage to property from errors or mistakes in this operating manual.

Please disconnect the battery before you start with the installation. During montage all additional supply lines must be secured pursuant to their cross section and cable length. (DIN VDE 0298-4)

speedsignal GmbH
Carl-von-Ossietzky Straße 3 + 7
D- 83043 Bad Aibling

Phone: +49 8061 49518 – 0
Fax: +49 8061 49518 – 10

E-Mail: info@speedsignal.de
Homepage: www.speedsignal.de
facebook: facebook.com/speedsignal